

INSTALLATION INSTRUCTION

Engine Block Heater

Avant 760i




1. Remove engine cover plate






- 2. Remove rear cover plates (left and right).
- 3. Remove rear central cover.

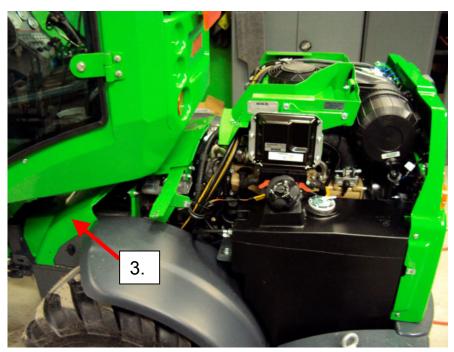






4. Remove bolts

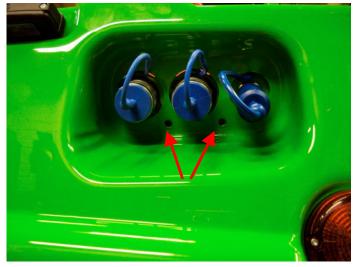

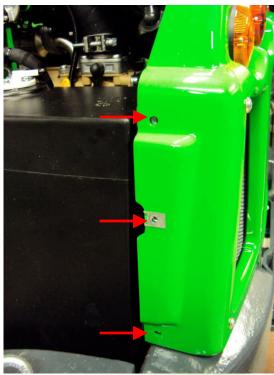





5. Remove seeger rings




6. Loosen bolts





7. Remove quick couplings

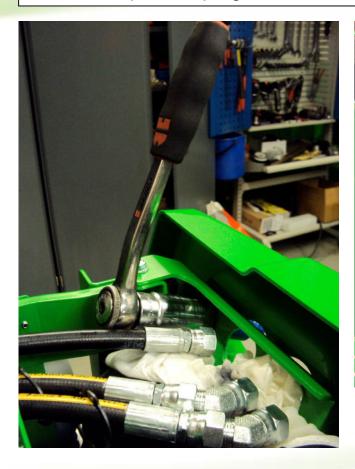





8. Remove the lamp wiring on both sides. (4 pcs)




Remove the turn signal connector also.





9. Remove the light wires of license plate.

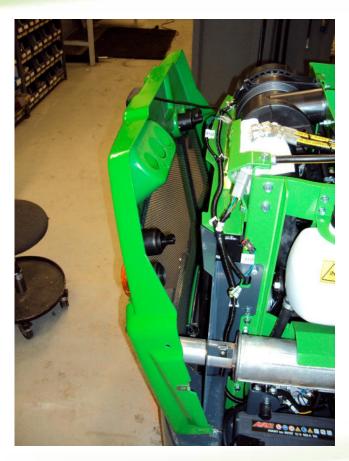







10. Remove ECU.

Release the lever by pushing the button.

Remove cables.



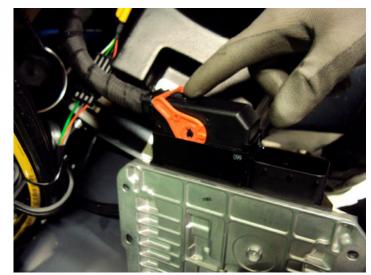


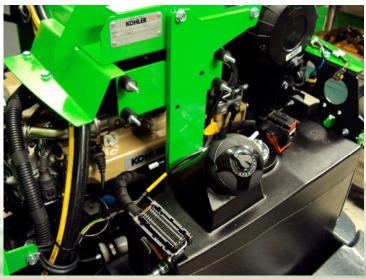



11. Remove the brackets.



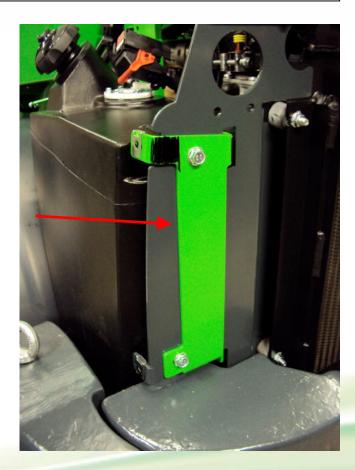



12. Lift the fuel tank out.








13. Drill the holes for the bracket (diameters 7mm and 25mm).



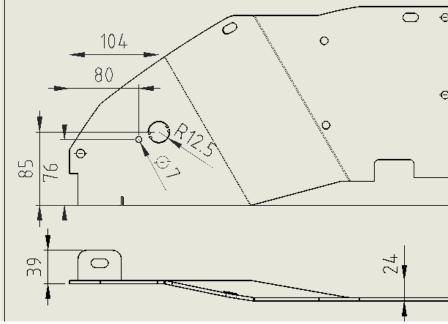

Measure holes accurately so that the central cover fits in place.





14. Install the block heater plug and wiring harness. (Bolt M6*16)




Block heater






15. Tighten the plug.

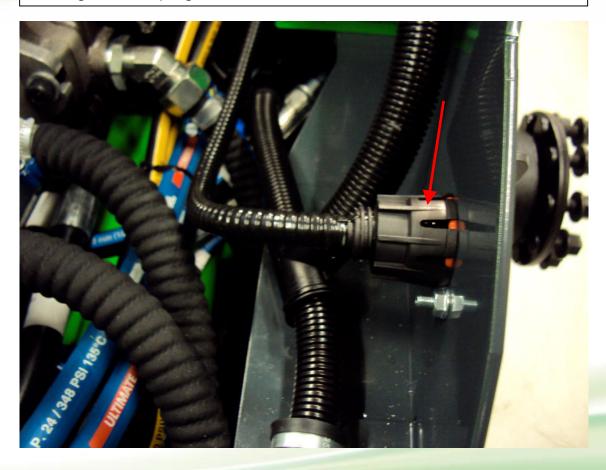



16. Attach the ground wire.

Attach the wire under the bolt.

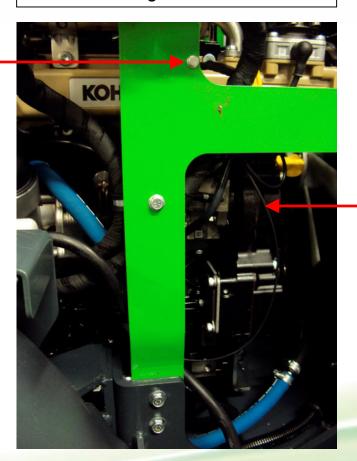

Ground wire



17. Assemble all parts back in reverse order.